



BS&B SAFETY SYSTEMS, INC.
BS&B SAFETY SYSTEMS LTD

Installation Instructions

Installation Instructions for Type SK_R-U™ Rupture Disk and Union UR™ Safety Head

Warning: Rupture disks are intended to provide a pressure relief opening. This rupture disk is designed to burst at a specified temperature and pressure, thereby relieving excess pressure or preventing excessive vacuum in a system. **It is imperative that this rupture disk be properly installed and safely vented in order to avoid bodily injury, damage to property, pollution and loss of product.** BS&B Safety Systems, Inc. and BS&B Safety Systems Limited supply disks selected by their customers, which are manufactured in reliance upon information and specifications supplied by the customer. BS&B Safety Systems, Inc. and BS&B Safety Systems Limited are not liable for any damage resulting from improper installation, improper system design, unsafe venting, or other factors beyond BS&B Safety Systems, Inc. and BS&B Safety Systems Limited control. Do not locate the rupture disk device where personnel, equipment or property will be exposed to released product and pressure through the disk. Handle carefully, disk and tag may have sharp edges.

Order Replacement Disks by Lot Number (shown on the disk's tag)

BEFORE YOU INSTALL A RUPTURE DISK

1. Inspect Safety Head

Inspect Safety Head's mating surfaces (inlet and holddown ring) for foreign material. Pits, dust or grit can damage the rupture disk affecting disk performance or cause leakage. If surfaces are rough, polish with a fine emery cloth. Clean if necessary.

Do not machine Safety Head holder as dimensions are critical.

2. Inspect the Rupture Disk

Prior to assembly ensure that the SK_R-U™ type disk is to be installed in a type UR™ safety head holder.

The rupture disk burst pressure must not exceed the pipe system rating.


Handle the rupture disk carefully, holding the disk by the tag and the perimeter only.

Examine both sides of the disk checking the seating and domed surfaces for nicks, dents, scratches and foreign material, which can damage the disk, cause leakage or affect the burst pressure.

Do not install a damaged disk.

If damaged the type SK_R-U™ disk will burst at or below its marked burst pressure.

The SK_R-U™ uses SAF™ technology (Structural Apex Forming) and the precision indentation at the Apex of the disk is present in all cases.

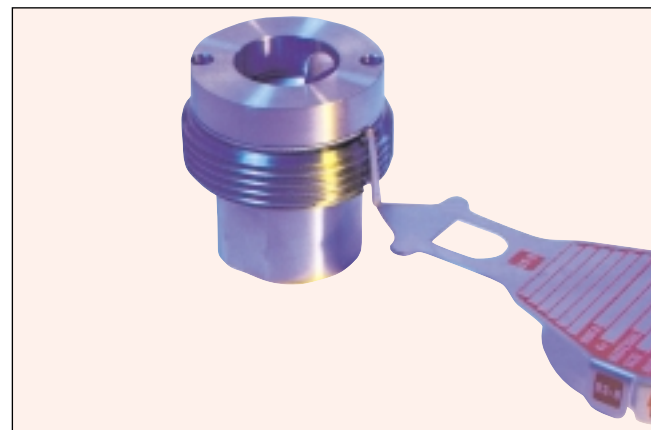

SAFETY PRECAUTIONS - CAUTION

- Only competent, trained personnel should install rupture disk safety devices in accordance with these installation instructions.
- Do not remove rupture disks from packaging for inspection until ready to install.
- Consider recoil. Provide adequate support for piping and connections to absorb recoil/reaction forces when the disk ruptures. Recoil is the force the system will experience upon disk rupture. Recoil (lbs) is approximately twice the disk's burst pressure (psig) times the relief area (in.²).
- The rupture disk and Safety Head should not be subjected to excessive structural bending stresses such as that produced by unsupported or misaligned piping.
- If disks are liquid cleaned, and a high velocity, particle spray or jet is used, take care not to damage the disk.

- Do not locate the disk where it may be subjected to thermal shock. Moisture, rain, condensation or snow may cause a thermal shock to the disk causing the disk to burst below its marked burst pressure. A protector is recommended for temperature above 212°F (100°C), consult BS&B Safety Systems, Inc. or BS&B Safety Systems Limited.
- When the disk ruptures, the resulting shock wave may affect the operating performance of down-stream equipment.
- Do not reinstall a disk that has been removed from the Safety Head. When stresses in the disk are relieved by removing from the Safety Head the disk can never

resume its original installed condition, which can affect disk performance.

- The rupture disk and Safety Head must not be machined or modified in any way except with the approval of BS&B Safety Systems, Inc. or BS&B Safety Systems Limited. Failure to obtain such approval voids the warranty on this product.
- Safety Head and rupture disk materials should be compatible with the process.
- Corrosion, disk damage and process conditions may deteriorate disk performance and necessitate frequent replacement.

Installation of SK_R-U™ Rupture Disk in UR™ Type Safety Head

1. Place inlet of Safety Head on a flat work surface in position as shown with locating pin and capscrew holes up. Please refer figure 1.
2. Place NEW, UNDAMAGED, rupture disk on inlet so locating pin mates with the corresponding hole in the rupture disk and holes in disk align with capscrew hole locations.
3. Place holddown ring on disk aligning holes in holddown ring with locating pin and capscrew holes in disk and inlet.
4. Hold the holddown ring flat against the disk and inlet, then install both capscrews finger tight, using a hex-key size 3/32 in or 7/64 in (or metric equivalent) torque to maximum of 2.5 Nm (20 in lb).
5. Remove existing gasket and place new gasket (supplied with each disk) on holddown ring, adhesive side down.
6. Place outlet and nut in position and tighten finger tight.
7. Tighten nut using a torque wrench to 350 Ft.lbs (475 Nm).
8. When using a BS&B Torque Drive Adapter set the torque wrench at the setting corresponding to the LN length shown in Table 1. Tighten the assembly to the TW value shown in Table 1.

It may be necessary to restrain or clamp the Safety Head inlet.

Ensure flow arrows on the disk tag and on the nut of the Safety Head point in the same direction. Flow arrow on the Safety Head and rupture disk tag should also point in the desired process flow direction upon disk rupture.

WARNING

Should the SK_R-U™ disk and its Safety Head be installed upside down, the burst pressure of the rupture disk generally exceeds 1.5 times the marked burst pressure. A new gasket must be fitted when replacing a rupture disk to ensure a leak tight assembly downstream of the rupture disk. The UR™ Safety Head has a "bite-type" seal on the inlet face that engages with the rupture disk. Do not modify this feature in any way. Should the "bite-type" seal be incomplete or damaged contact BS&B for repair.

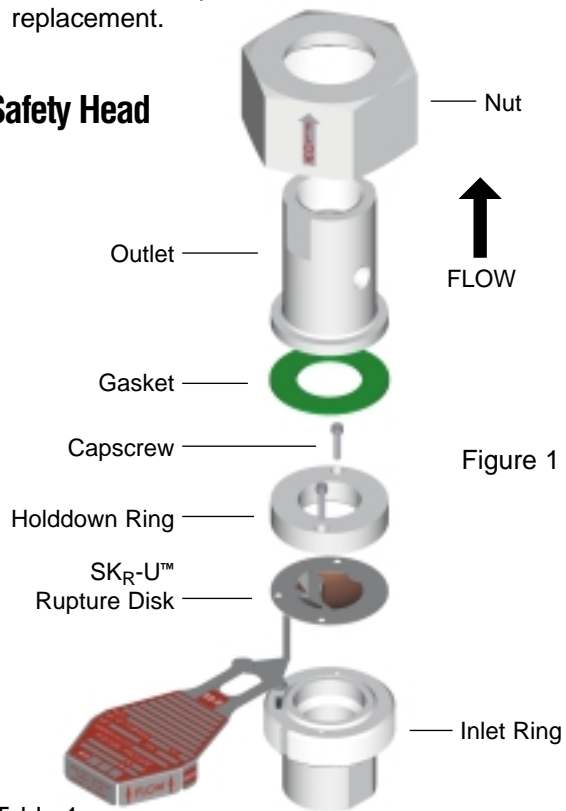


Table 1

Torque Calculations for use with BS&B Torque Wrench Adapter (P/N K0-0-5050-000)	LN Normal length from center of pull to center of drive.		TW Torque Wrench Setting.	
	mm	inches	Nm.	Ft.lbs.
TW = TA x LN / LE	400	5.7	388	286
TW Torque wrench setting.	500	19.7	403	297
TA Required Torque = 475 Nm/350 Ft.lbs	600	23.6	413	304
LN Normal length from center of pull to center of square drive.	700	27.6	421	310
LE Length from center of pull to center of adapter = LN + 90 mm (3.5 inches)	800	31.5	427	315
	900	35.4	432	319
	1000	39.4	436	321
	1500	59.1	448	330
	2000	78.7	455	335

Limitations of Warranties - BS&B Safety Systems, Inc. and BS&B Safety Systems Ltd warrants their products, when properly installed, used and maintained by the original purchaser, against defective workmanship and materials for a period of twelve (12) months from the date of shipment. Purchaser's failure to use this product in strict compliance with all material operating specifications provided to BS&B Safety Systems, Inc. or BS&B Safety Systems Ltd by purchaser prior to BS&B Safety Systems, Inc. or BS&B Safety Systems Ltd. production or shipment of this product shall void this warranty. Rupture disks are warranted solely to burst within specified pressure ranges at temperatures specified at the time of sale.

Where pressure relief or other products used by Buyer involve multi-part assemblies, each part must be provided by BS&B Safety Systems, Inc. or BS&B Safety Systems Ltd. BS&B Safety Systems, Inc. and BS&B Safety Systems Ltd specifically disclaim any warranties and any and all liability for damages, either direct or indirect, incidental or consequential, arising from the use of rupture disk assemblies (e.g. rupture disk and rupture disk holder), explosion vent assemblies (e.g. vent and safety frame) or other assemblies not wholly comprised of BS&B Safety Systems, Inc. and BS&B Safety Systems Ltd provided products.

BS&B Safety Systems, Inc. and BS&B Safety Systems Ltd do not warrant any article not provided by BS&B Safety Systems, Inc. or BS&B Safety Systems Ltd. BS&B Safety Systems, Inc. and BS&B Safety Systems Ltd do not warrant this product against loss or damage caused directly or indirectly by improper pressure relief system design; by the improper use, maintenance or installation (including improper torque) of this product; or by corrosion, erosion or malfunction caused by acids, chemicals, fumes, rust, dirt, debris, thermal shock, shock waves or other external agencies over which BS&B Safety Systems, Inc. and BS&B Safety Systems Ltd have no control.

THE EXPRESSED WARRANTIES HEREIN GIVEN ARE EXCLUSIVE AND IN LIEU OF ALL WARRANTIES

EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BUYER'S SOLE AND EXCLUSIVE REMEDY FOR BREACH OF ANY WARRANTY SHALL BE, AT BS&B SAFETY SYSTEMS, INC. OR BS&B SAFETY SYSTEMS LTD OPTION, THE REPAIR OR REPLACEMENT OF THE PRODUCT, F.O.B. TULSA, OKLAHOMA. OR LIMERICK, IRELAND.

Liability Limitations - BS&B Safety Systems, Inc. and BS&B Safety Systems Ltd manufacture and supply their products in reliance upon information and specifications provided by its customers. BS&B Safety Systems, Inc. and BS&B Safety Systems Ltd specifically disclaim any and all liability, of whatever nature, resulting or arising from Buyer's failure to disclose fully all material operating conditions, design parameters, process components, or system or vessel requirements, or from any misrepresentations or omissions by Buyer. Buyer agrees to indemnify and hold harmless BS&B Safety Systems, Inc. or BS&B Safety Systems Ltd for all costs, loss, liability or damage arising or resulting from BS&B Safety Systems, Inc. or BS&B Safety Systems Ltd manufacture or supply of this product in accordance with Buyer's specifications or requirements.

BS&B SAFETY SYSTEMS, INC. OR BS&B SAFETY SYSTEMS LTD AGGREGATE TOTAL LIABILITY TO BUYER FOR ANY AND ALL LOSS OR DAMAGE ARISING OUT OF BUYER'S USE OF, OR INABILITY TO USE, THE PRODUCT SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT OR \$1,000.00, WHICHEVER IS LESSER. BS&B SAFETY SYSTEMS, INC. OR BS&B SAFETY SYSTEMS LTD SHALL NOT BE LIABLE FOR PERSONAL INJURY OR PROPERTY DAMAGE ARISING OUT OF BUYER'S PURCHASE, INSTALLATION OR USE OF THE PRODUCT, AND IN NO EVENT SHALL BS&B SAFETY SYSTEMS, INC. OR BS&B SAFETY SYSTEMS LTD BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES RESULTING FROM ANY SUCH CAUSES.

ISO 9001 Quality System Certification





BS&B SAFETY SYSTEMS, INC
BS&B SAFETY SYSTEMS LTD

BS&B Safety Systems, Inc and BS&B Safety Systems Ltd are here to assist you in providing a safe and efficient work place. For assistance on installation, audits, training or technical advice, please contact our Customer Service Department.

BS&B Safety Systems, Inc	or	BS&B Safety Systems Ltd
7455 East 46th Street,		Raheen Business Park
Tulsa, OK 74145, USA		Limerick, Ireland
Telephone: +1 918-622-5950		Telephone: +353 61 227022
Facsimile: +1 918-665-3904		Facsimile: +353 61 227987
Toll Free: 1-888-272-7755		E-mail: sales@bsb.ie
E-mail: sales@tul.bsbsystems.com		www.bsb.ie
www.bsbsystems.com		